

Kaba Mas X07 & X10 Mechanical Lock Template

MAG557314

This template is designed for the X07 and X10 locks.


The labels (stamped letters on template) are defined as follows:

- L - Lever Screw (X07 ONLY)**
- M - Motor Gear (*DON'T USE* - Requires manipulation tool no longer available)**
- R - Relock (For X07 ONLY)**
- P - Lever Pin**

The template is illustrated with the drill points positioned for a right hand mounted lock. Depending on the lock mounting in the safe, the template can be rotated and mounted for any lock hand.

To mount the template, remove the dial and dial ring from the safe. Use the 8-32 screws to secure the template to the safe using the holes spaced for Mosler or S&G/Kaba Ilco dial ring, orienting the template in the proper handing position.

To mount the Bullet II Base to the template, choose the proper drill point and attach the Bullet II Base to the template using the 8-32 screws. Provided with the drill rig.

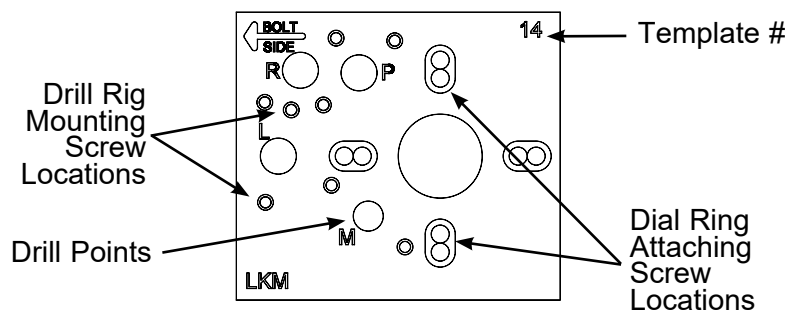

MAG557314INST

Copyright © 2019 Lockmasters Inc. 10/19

Fax 859.885.1731
800.654.0637

LOCKMASTERS
INCORPORATED

2101 John C. Watts Dr., Nicholasville, KY 40356

salesinfo@lockmasters.com
www.lockmasters.com