

KABA MAS AUDITCON/CENCON & SLIDEBOLT

MAG557317


This template was designed with drill points for the following locks:

- Kaba-Mas Auditcon I and II (deadbolt & slidebolt)
- Kaba-Mas Cencon – new style (gold lock body, solenoid)
- Mas-Hamilton Cencon – old style (black lock body, motor)
- Kaba-Mas Slidebolts (LC, B52, QuikLock, Vindicator, etc)

The labels on the templates are as follows:

- P – Lever Pin (deadbolt)
- L – Lever screw (deadbolt, new style - probe bolt out of lock case)
- R – Relock Reset (deadbolt)
- B – Rear Solenoid Button (slidebolt, old style, non-deadlocking solenoids only)
- W – Wedge or Pawl (slidebolt, preferred drill point)

The template is illustrated with the drill points positioned for a right hand mounted lock. Depending on the lock mounting in the safe, the template can be rotated and mounted for any hand lock. The Slidebolt features a dual-handed lock case that can be flipped and mounted with either side facing the safe door. It is essentially to know which side of the slidebolt you are drilling in order to select the correct B and/or W hole on the template. To mount the template, remove the dial and dial ring from the safe. Use the provided 8-32 screws to secure the template to the safe, orienting the template in the proper handing position. To mount the Bullet II base to the template, choose the proper drill point and attach the Bullet II base to the template using the 8-32 screws.

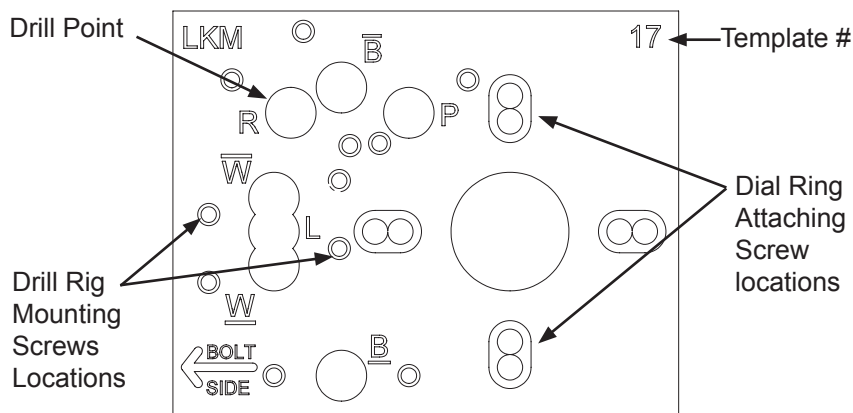

LOCKMASTERS[®]
I N C O R P O R A T E D

Fax 859.885.1731
800•654•0637
MAG557317INST

2101 John C. Watts Drive, Nicholasville, KY 40356

salesinfo@lockmasters.com
www.lockmasters.com
copyright © 2012 Lockmasters Inc. 5/12